# **Autonics**

# Solid State Relay **SR1 SERIES**



Thank you very much for selecting Autonics products. For your safety, please read the following before using.

# Caution for your safety

XPlease keep "Caution for your safety" to avoid accidents or damages as using it correctly.

\*The meaning of 'Warning' and 'Caution' is as follows:

Marning In case a serious injury or dead may be occurred.

↑ Caution In case a little injury or damage of this unit may be occurred.

\*The meaning of the mark on the product and manual is as follows:

 $\Delta$  is a caution mark for danger in special condition.


#### Marning

- 1. In case of using this unit with machineries(Ex: Nuclear power control, medical equipment, ship, vehicle, train, airplane, combustion apparatus, safety device, crime/disaster prevention equipment, etc), it is required to install fail-safe device.
- It may cause a fire, human injury or damage to property
- 2. Install the unit on a panel. It may give an electric shock.
- 3. Do not connect, inspect or repair when power is on.
- It may give an electric shock.
- 4. Do not disassemble the case. Please contact us if it is required.

#### It may cause an electric shock or a fire.

- **⚠** Caution 1. This unit shall not be used outdoors.
- It might shorten the life cycle of the product or give an electric shock.
- 2. Please observe the rated specifications.
- It might shorten the life cycle of the product and cause a fire.
- 3. In cleaning unit, do not use water or an oil-based solvent and please use dry towels
- It may cause an electric shock or a fire.
- 4. Do not use this unit in place where there are flammable or explosive gas, humidity, direct rays, radiant heat, vibration and impact etc. It may cause a fire or an explosion
- 5. Do not inflow dust or wire dregs into the unit.
- It may cause a fire or a malfunction
- 6. Do not touch SSR output terminals right after power switch OFF.
- It may cause an electric shock due to an electric charge in snubber circuit.

# Ordering information

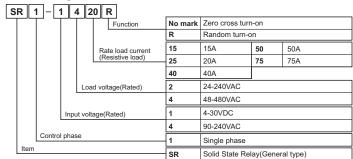

#### Dimensions [Unit: mm] Hole cut-out for panel front mounting 41 ø 4.5 2-M4X0.7 TAP 28.3 **(P)** ₩ 28 Input LED (Green **(D)** X Tightening torque: 1.8 to 2.5N·m 4 5 \*The above specifications are subject to change without notice

## Specifications

		4-30VDC input voltage	90-240VAC input voltage			
Input voltage range		4-32VDC	85-264VACrms(50/60Hz)			
Max. input current		9mA(Zero cross trun-on), 13mA(Random trun-on)	7mArms(240VACrms)			
Pick-up voltage		4VDC	85VACrms			
Drop-out voltage		1VDC	10VACrms			
Tum-on time	Zero cross turn-on	Max. 0.5 cycle of load source + 1ms	Max. 1.5 cycle of load source + 1ms			
	Random turn-on	Max. 1ms	Max. 1.5 Cycle of load source + IIIIs			
Turn-off time		Max. 0.5 cycle of load source + 1ms	Max. 1.5 cycle of load source + 1ms			


Output

		24-240VAC load voltage				48-480VAC load voltage					
Load voltage range		24-264VACrms(50/60Hz)				48-528VACrms(50/60Hz)					
	Resistive load (AC-51)	15Arms	25Ams	40Ams	50Ams	75Arms	15Arms	25Ams	40Arms	50Ams	75Arms
current Ta=25°C	Motor load (AC-53a)	-					5Arms	8Arms		15Arms	
Min. load current		0.15Ams	rms 0.2Arms 0.5Arms			0.5Arms					
Max. 1cycle surge current(60Hz)		190A	270A	330A	1000A		300A	500A		1000A	
Max. non-repetitive surge current (I <sup>2</sup> t, t=8.3ms)		150A²s	300A²s	500A <sup>2</sup> s	4000A <sup>2</sup> s		350A²s	1000A²s		4000A <sup>2</sup> s	
Peak voltage (non-repetitive)		600V					1200V(Zero cross turn-on), 1000V(Random turn-on				
Leakage current(Ta=25°C) Max. 10mArms											
Output on voltage drop [Vpk] (Max. load current) Max. 1.6V											
Static off	-state dv/dt	500V/µs									
	ntrolling mot		se the ni	oduct wh	nose Inar	d voltage	range is	within 4	8-480\//	Crms	

General enceifications

General specifications					
Certification		UL508, CSA22.2 No.14 and IEC/EN 60947-4-3			
Type of the coordination of conditional short-circuit current		type1			
Dielectric strength(Vrms)		4000VAC 50/60Hz 1min. (Input-Output, Input/Output-Case)			
Instulation resistance		Min. 100MΩ (at 500VDC megger)			
Input LED		Green			
Environ -ment	Ambient temperature	-30 to 80°C, Storage: -30 to 100°C(Rated load current capacity is different based on the surrounding temperature. Refer to ' $\blacksquare$ SSR Derating curve'.			
	Ambient humidity	45 to 85%RH, Storage: 45 to 85%RH			
Input terminal connection		Min. 1X0.5mm² (1XAWG 20) Max. 1X1.5mm² (1XAWG 16) or 2X1.5mm² (2XAWG 16)			
Output terminal connection		Min. 1X1.5mm²(1XAWG 16) Max. 1X16mm²(1XAWG 6) or 2X6mm²(2XAWG 10)			
Input terminal fixed torque		0.75 to 0.95N⋅m			
Output terminal fixed torque		1.6 to 2.2N·m			
Unit weight		Approx. 73g			

\*Condition for use in Environment is no freezing or condensation. XFor wiring the terminal, an O-ring terminal must be used.

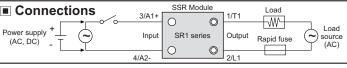

# Caution for using


- 1. Attach a heatsink and ventilate for smooth convection current. If not, congested heat transfer may cause product failure or malfunction.
- 2. For mounting multiple SSR, please keep certain installation intervals for heat prevention. For horizontal installation(when the heights of input part and output part are equal), it is recommended to apply less than 50% of
- 3. Make sure do not touch the heatsink or the unit body while power is supplied or right after load power is turned OFF. If not, it may cause a burn.

  Connect the proper cable for the rated load current with output terminal.
- 5. Use rapid fuse of which I't is under 1/2 of SSR I't in order to protect the unit from load's short-circuit current.
- 6. In case of a short-circuit please replace the fuse with a 1/2 of SSR I't value specified semiconductor protective type In case that load's current is lower than SSR min. load current, connect dummy resistance to the load in parallel so as to make load's current higher than SSR min. load current.
- When selecting phase control with random turn-on model, install the noise filter between load and load's source. 9. Make sure that the screw on output terminal is tightly fastened. Using the unit with loose bolt may cause product failure or malfunction.
- 10. Do not touch the load's terminal even if output is OFF. It may cause an electric shock.


  11. The signal input of the 4-30VDC model should be supplied by the insulated and limited voltage/current or by Class 2 power supply.
- 12. To attach the heatsink, use Thermal Grease as below or that of equal specification. \*\*Thermal Grease: GE TOSHIBA(YG6111), KANTO-KASEI(FLOIL G-600), SHINETSU(G746)
- 13. Proper application environment (Avoid following environments to install)
- Where temperature/humidity is beyond the specification
   Where dew condensation occurs due to temperature change
- ③Where inflammable or corrosive gas exists Where direct rays of light exist
- Where severe shock, vibration or dust exists
- ®Where near facilities generating strong magnetic forces or electric noise
- 14. Installation environment
- ①It shall be used indoor ②Altitude Max. 2,000m ③Pollution Degree 2 ④Installation Category III

## SSR Derating curve


© SR1-1215/4215

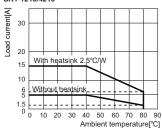


### ® SR1-1225/4225

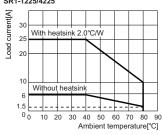


® SR1-1240/4240

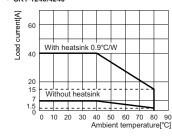


◎ SR1-1275/1475/1475R/4275/4475

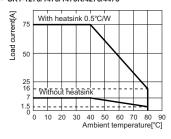


SR1-1415/1415R/4415

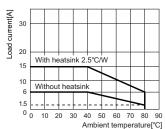


SR1-1425/1425R/4425

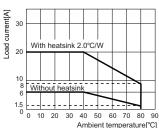

SR1-1440/1440R/4440

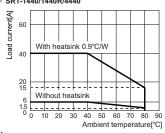

® SR1-1250/1450/1450R/4250/4450

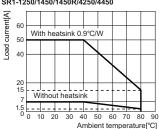

⚠ Please supply less than 50% of the rated load current when installing several SSRs closely due to decreasing effectiveness of protection against heat.

Photoelectric sensors

Fiber optic sensors

■ Pressure sensors

■ Display units

Timers

# Major products

- Proximity sensors
- Area sensors
- Door/Door side sensors
- Counters ■ Rotary encoders

- Power controllers
- Sensor controllers ■ Panel meters ■ Graphic/Logic panels
- Temperature controllers
- Tachometer/Pulse(Rate) meters
- Temperature/Humidity transducers
- Switching power supplies
- Stepping motors/drivers/motion controllers
- Field network devices
- Laser marking system(CO₂, Nd: YAG)
- Laser welding/soldering system

## Autonics Corporation http://www.autonics.com

Satisfiable Partner For Factory Automation

HEAD QUARTERS :

41-5, Yongdang-dong, Yangsan-si, Gyeongnam, 626-847 Korea

OVERSEAS SALES:

Bldg. 402 3rd Fl., Bucheon Techno Park, 193, Yakdae-dong, Wonmi-gu, Bucheon-si, Gyeonggi-do, 420-734, Korea TEL:82-32-610-2730 / FAX:82-32-329-0728

The proposal of a product improvement and development : product@autonics.com

FP-KF-02-035A